

How to Clean The Ozone Tube—Instruction

1. Ozone Generator Appearance



2. Cover Release: **Caution!! Very Sharp edge**



3. Cover release drawing



4. Pull Out The Ozone Tube



5. Clean the glass by soft cloth or tissue (When Inner has green oxidize powder it's normal condition of chlorine chemical composition. Will Not effect the ozone output)



6. Re-Insert the ozone glass tube inside stainless tube



7. Push hard to remain in same position before release it from stainless tube



8. Re-Position the black cover
Caution!! Very Sharp edge



9. Twist It from right to left for lock in same position before release. O.K. Clean Perfectly



After above procedure the ozone will be strong again. We suggest to clean the tube once every three month. (Depends on the environment will be extend or shorter the time of clean).